

# Quick Start Guide

## Setting up your GigaSpire BLAST u4m


1

Connect GigaSpire BLAST u4m to power outlet.



2


When the LED is flashing red, you can pair the GigaSpire BLAST u4m with the GigaSpire BLAST u6x. Press and hold the WPS buttons on the GigaSpire BLAST u4m and then the GigaSpire BLAST u6x for 3 seconds each (less than 30 seconds apart). The LED flash green while attempting to pair.

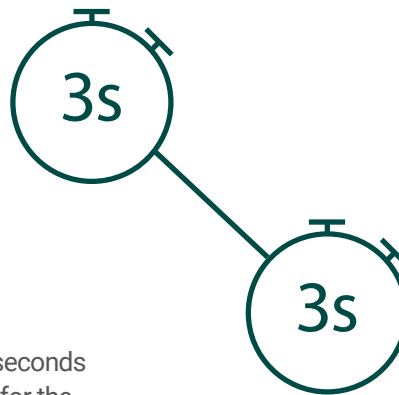

3

Use the solid green LED indicator (displays for 60 seconds at end of pairing cycle) to determine ideal location for the u4m. If necessary, relocate it to a more ideal distance from the GigaSpire BLAST and confirm successful pairing after the u4m reboots (repeating steps 2-3 as needed).

GigaSpire BLAST u4m location is ideal distance from the GigaSpire BLAST u6x.  
Ideal: Steady State

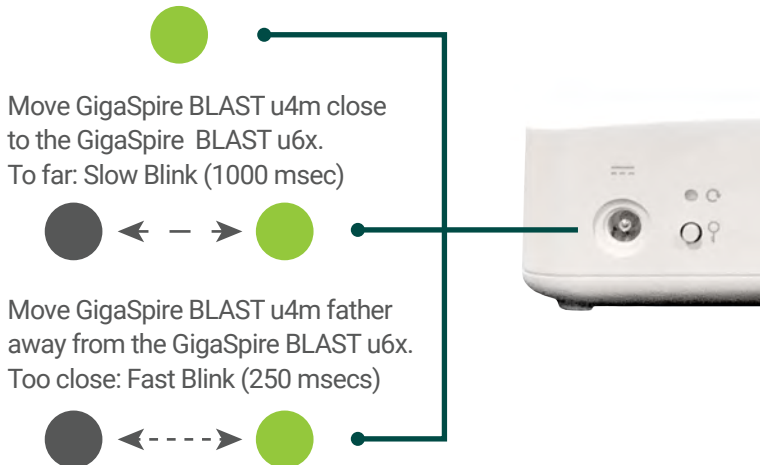

4

If applicable, use the **Apex Managed WIFI** app to set up the GigaSpire BLAST. See the **Apex Quick Start Guide** for guidance.

**Need help?**

Contact the Norvado Support team at 800-250-8927

